


MOUNTING OPTIONS


Attached to sheetrock wall with wooden or metal studs

N O T E : Toggle bolts **MUST** be used on both sides of unit when mounting to sheetrock or if unable to line up with studs.

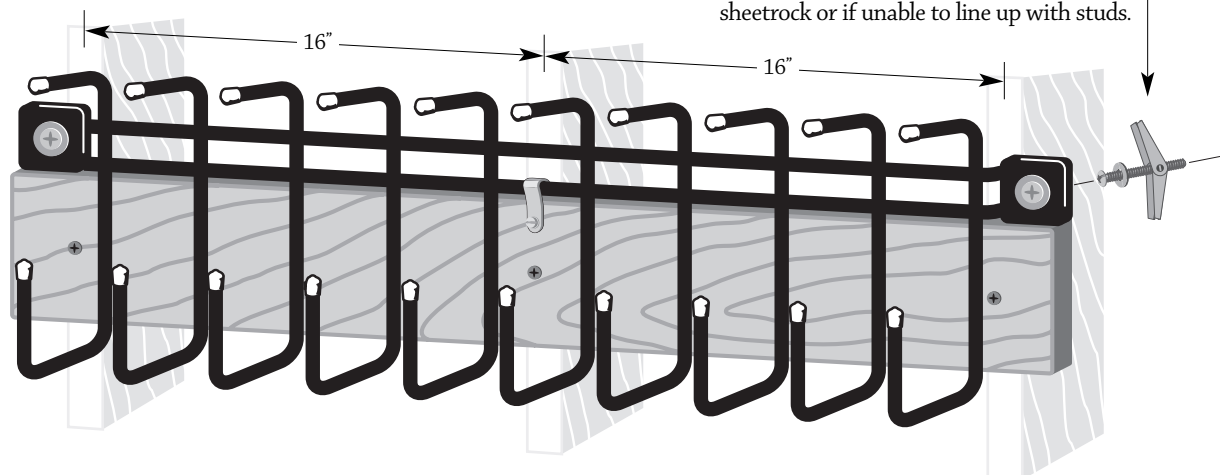

Attached to wooden or metal frame without sheetrock


N O T E : If unit cannot mount to studs, it **MUST** be secured to 2 x 4 inch boards mounted between studs (not included).

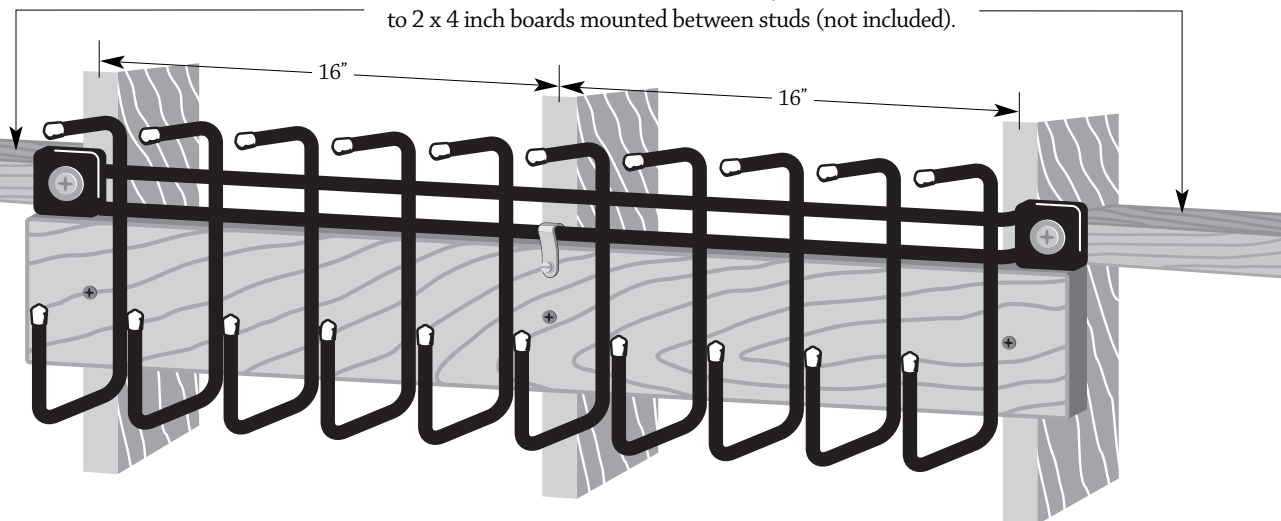


FASTENERS INCLUDED



Three #6 x 2 1/2"
coarse thread
drywall screws

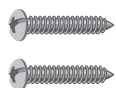

Two #14 x 2"
screws

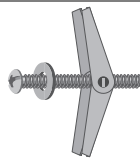

Toggle bolt
1/4" #20 x 3"



One center clip
w/screw

INSTALLATION INSTRUCTIONS

Thank you for purchasing the Garage Buddy. The ideal place to hang the buddy is near the garage door slide rails or a place not used to its fullest.

Please follow all instructions carefully and mount securely before use.

STEP ONE

Securely attach the 1 x 3 inch support board (included) to studs using the three drywall screws provided.

Board must be mounted perfectly level on wall for safety.

If unit cannot line up evenly with three studs, be sure to catch at least two studs. Use all three drywall screws, with two for the heaviest side. You must mount to at least two studs.

STEP TWO

Place unit on top of board. Securely attach to wall using the two #14 screws provided or toggle bolts depending on your situation.

I M P O R T A N T : Both toggle bolts must be used if unit cannot line up with at least one stud when mounting to sheetrock.

STEP THREE

Attach center clip with screw provided to board. This provides extra stability and prevents bowing when unit is fully loaded.

ADDITIONAL MOUNTING OPTIONS

1. For solid wood walls 1/2" or thicker, mounting to studs or use of toggle bolts is not required.
2. For walls with metal studs (with or without sheetrock), follow all steps above, but consider using self-tapping screws for metal or you may pre-drill correctly sized holes.

I M P O R T A N T : If unit cannot be attached to at least two studs (one for each side of the unit and board), you must ensure proper support by using toggle bolts with metal expanders (provided). Pre-drill proper size hole, insert, and securely tighten screws.

Call 1-888-35-BUDDY if none of these mounting options apply to your situation. We will provide a solution.

